





Protection Ring from Tube Deformation Insert Ring

- *Protect tubes from deformation.*
- *Ultra soft tube is connectable to Fitting.*
- *Necessary for the connection with Push-In Fitting, when fluid medium is water.*

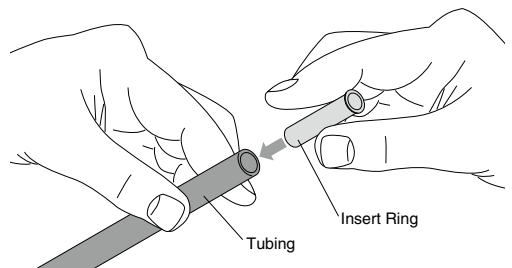

Model Designation (Example)

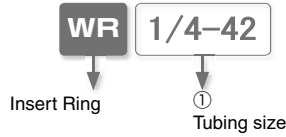

① Tubing size

Inch Size							
Code	3/16-30	1/4-42	1/4-46	3/8-60	3/8-70	1/2-85	1/2-96
O.D. Inch	ø3/16"	ø1/4"	ø1/4"	ø3/8"	ø3/8"	ø1/2"	ø1/2"
I.D. In.(mm)	ø3	ø4.2	ø4.6	ø6	ø7	ø8.5	ø9.6

Metric Size													
Code	0320	0425	0640	0850	0860	1065	1075	1080	1280	1290	1210	1611	1613
O.D. (mm)	ø3	ø4 (5/32")	ø6	ø8(5/16")	ø8(5/16")	ø10	ø10	ø10	ø12	ø12	ø12	ø16(5/8")	ø16(5/8")
I.D. (mm)	ø2	ø2.5	ø4	ø5	ø6	ø6.5	ø7.5	ø8	ø8	ø9	ø10	ø11	ø13

Applicable Tubing Model

Tubing Size			Tubing Type									
Code (Inch OD)	O.D.	I.D. (mm)	UB	UBS UC CTB	UBT	UD	UE	NA	NB	SNT	FB CTA	SFT SET
(1/8") 0320	1/8"	2	WR0320	—	—	—	—	—	—	—	—	—
(5/32") 0425	5/32"	2.5	WR0425	—	—	—	—	WR0425	—	—	—	—
3/16-30	3/16"	2.99	WR3/16-30	—	—	—	—	WR3/16-30	—	—	—	—
1/4-42	1/4"	4.15	WR1/4-42	WR1/4-42	—	—	—	—	—	—	—	—
1/4-46		4.57	—	—	—	—	—	WR1/4-46	—	—	WR1/4-46	WR1/4-46
(5/16") 0850	5/16"	5	WR0850	—	—	—	—	—	—	—	—	—
0860		6	—	—	—	—	—	WR0860	—	—	—	—
3/8-60	3/8"	5.99	WR3/8-60	WR3/8-60	—	—	—	—	—	—	—	—
3/8-70		6.99	—	—	—	—	—	WR3/8-70	—	—	WR3/8-70	WR3/8-70
1/2-85	1/2"	8.5	WR1/2-85	WR1/2-85	—	—	—	—	—	—	—	—
1/2-96		9.56	—	—	—	—	—	WR1/2-96	—	—	WR1/2-96	WR1/2-96
(5/8") 1611	5/8"	11	WR1611	—	—	—	—	—	—	—	—	—
1613		13	—	—	—	—	—	WR1613	—	—	—	—
0320	3mm	2	WR0320	—	WR0320	—	WR0320	—	—	—	—	—
0420	4mm	2	—	—	—	—	—	—	—	WR0320	—	WR0320
0425	(5/32")	2.5	WR0425	WR0425	WR0425	WR0425	WR0425	WR0425	WR0425	WR0425	WR0425	WR0425
0640	6mm	4	WR0640	WR0640	WR0640	WR0640	WR0640	WR0640	WR0640	WR0640	WR0640	WR0640
0850	8mm	5	WR0850	WR0850	WR0850	—	WR0850	—	—	—	—	—
0860	(5/16")	6	—	—	—	WR0860	—	WR0860	WR0860	WR0860	WR0860	WR0860
1065	10mm	6.5	WR1065	WR1065	WR1065	—	WR1065	—	—	—	—	—
1075		7.5	—	—	—	WR1075	—	WR1075	WR1075	WR1075	WR1075	WR1075
1080		8	—	—	—	—	—	—	—	WR1080	—	WR1080
1280	12mm	8	WR1280	WR1280	WR1280	—	WR1280	—	—	—	—	—
1290		9	—	—	—	WR1290	—	WR1290	WR1290	WR1290	WR1290	WR1290
1210		10	—	—	—	—	—	—	—	WR1210	—	WR1210
1611	16mm	11	WR1611	—	—	—	—	—	—	—	—	—
1613	(5/8")	13	—	—	—	—	—	WR1613	WR1613	WR1613	—	WR1613

※ Inch size in the column of "UBS, UC, CTB" and "FB, CTA" refer to CTB and CTA only.


※ You may use 4mm O.D. tubing as 5/32" O.D. tubing, 8mm O.D. as 5/16" O.D. and 16mm O.D. as 5/8" O.D. tubing.

WR Insert Ring



The products listed in this page are ECO-friendly products.

* Please refer to page 4 for the details of ECO-friendly products.

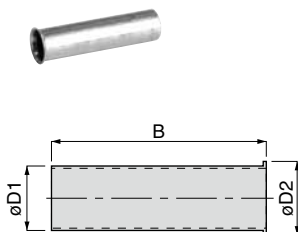

Unit : mm

Model code	Tube O.D. x I.D.(ϕ)	$\phi D1$	$\phi D2$	B	Thickness	Weight (g)	CAD File name
WR0425 (5/32")	5/32"×2.5	2.5	2.8	18	0.2	0.3	WR0425
WR3/16-30	3/16"×2.99	3	3.5	19	0.2	0.3	WR3_16-30
WR1/4-42	1/4"×4.15	4.2	4.7	18.5	0.2	0.5	WR1_4-42
WR1/4-46	1/4"×4.57	4.6	4.9	18.5	0.2	0.5	WR1_4-46
WR3/8-60	3/8"×5.99	6	6.5	22	0.2	0.8	WR3_8-60
WR3/8-70	3/8"×6.99	7	7.5	22	0.2	0.9	WR3_8-70
WR1/2-85	1/2"×8.5	8.5	9	25	0.2	1.1	WR1_2-85
WR1/2-96	1/2"×9.56	9.6	10	25	0.2	1.5	WR1_2-96
WR0320 (1/8")	3×2	2	2.3	18	0.2	0.2	WR0320
WR0425	4×2.5	2.5	2.8	18	0.2	0.3	WR0425
WR0640	6×4	4	4.5	18.5	0.2	0.4	WR0640
WR0850	8×5	5	5.5	20	0.2	0.5	WR0850
WR0860	8×6	6	6.5	20	0.2	0.6	WR0860
WR1065	10×6.5	6.5	7	22	0.2	0.8	WR1065
WR1075	10×7.5	7.5	8	22	0.2	0.9	WR1075
WR1080	10×8	8	8.5	25	0.2	1	WR1080
WR1280	12×8	8	8.5	25	0.2	1	WR1280
WR1290	12×9	9	9.5	25	0.2	1.2	WR1290
WR1210	12×10	10	10.5	25	0.2	1.4	WR1210
WR1611 (5/8")	16×11	11	13.5	27	0.2	1.9	WR1611
WR1613 (5/8")	16×13	13	13.5	27	0.2	1.7	WR1613

※ Material of Insert Ring is SUS304.

△ Detailed Safety Instructions

Before using PISCO products, be sure to read "Safety Instructions" and "Safety Instruction Manual" and "Common Safety Instructions for Tubes".

Caution

1. There is a possibility of dropping-off of Insert Ring from a tube edge into the piping, depending on the combination with Tubes. Implement specific countermeasures in advance, for the case that it flows down into pipes and cause a problem.

■ Applicable Tube and Related Products

PISCO's Push-In Fittings and Tubes



SAFETY Instructions

This safety instructions aim to prevent personal injury and damage to properties by requiring proper use of PISCO products.

Be certain to follow ISO 4414 and JIS B 8370

ISO 4414 : Pneumatic fluid power...Recommendations for the application of equipment to transmission and control systems.

JIS B 8370 : General rules and safety requirements for systems and their components.

This safety instructions is classified into "Danger", "Warning" and "Caution" depending on the degree of danger or damages caused by improper use of PISCO products.



Danger

Hazardous conditions. It can cause death or serious personal injury.



Warning

Hazardous conditions depending on usages. Improper use of PISCO products can cause death or serious personal injury.



Caution

Hazardous conditions depending on usages. Improper use of PISCO products can cause personal injury or damages to properties.



Warning

1. Selection of pneumatic products

- ① A user who is a pneumatic system designer or has sufficient experience and technical expertise should select PISCO products.
- ② Due to wide variety of operating conditions and applications for PISCO products, carry out the analysis and evaluation on PISCO products. The pneumatic system designer is solely responsible for assuring that the user's requirements are met and that the application presents no health or safety hazards. All designers are required to fully understand the specifications of PISCO products and constitute all systems based on the latest catalog or information, considering any malfunctions.

2. Handle the pneumatic equipment with enough knowledge and experience

- ① Improper use of compressed air is dangerous. Assembly, operation and maintenance of machines using pneumatic equipment should be conducted by a person with enough knowledge and experience.

3. Do not operate machine / equipment or remove pneumatic equipment until safety is confirmed.

- ① Make sure that preventive measures against falling work-pieces or sudden movements of machine are completed before inspection or maintenance of these machine.
- ② Make sure the above preventive measures are completed. A compressed air supply and the power supply to the machine must be off, and also the compressed air in the systems must be exhausted.
- ③ Restart the machines with care after ensuring to take all preventive measures against sudden movements.

Disclaimer

1. PISCO does not take any responsibility for any incidental or indirect loss, such as production line stop, interruption of business, loss of benefits, personal injury, etc., caused by any failure on use or application of PISCO products.
2. PISCO does not take any responsibility for any loss caused by natural disasters, fires not related to PISCO products, acts by third parties, and intentional or accidental damages of PISCO products due to incorrect usage.
3. PISCO does not take any responsibility for any loss caused by improper usage of PISCO products such as exceeding the specification limit or not following the usage the published instructions and catalog allow.
4. PISCO does not take any responsibility for any loss caused by remodeling of PISCO products, or by combinational use with non-PISCO products and other software systems.
5. The damages caused by the defect of Pisco products shall be covered but limited to the full amount of the PISCO products paid by the customer.



SAFETY INSTRUCTION MANUAL

PISCO products are designed and manufactured for use in general industrial machines. Be sure to read and follow the instructions below.

Danger

1. Do not use PISCO products for the following applications.
 - ① Equipment used for maintaining / handling human life and body.
 - ② Equipment used for moving / transporting human.
 - ③ Equipment specifically used for safety purposes.

Warning

1. Do not use PISCO products under the following conditions.
 - ① Beyond the specifications or conditions stated in the catalog, or the instructions.
 - ② Under the direct sunlight or outdoors.
 - ③ Excessive vibrations and impacts.
 - ④ Exposure / adhere to corrosive gas, inflammable gas, chemicals, seawater, water and vapor. *
* Some products can be used under the condition above(④), refer to the details of specification and condition of each product.
2. Do not disassemble or modify PISCO products, which affect the performance, function, and basic structure of the product.
3. Turn off the power supply, stop the air supply to PISCO products, and make sure there is no residual air pressure in the pipes before maintenance and inspection.
4. Do not touch the release-ring of push-in fitting when there is a working pressure. The lock may be released by the physical contact, and tube may fly out or slip out.
5. Frequent switchover of compressed air may generate heat, and there is a risk of causing burn injury.
6. Avoid any load on PISCO products, such as a tensile strength, twisting and bending. Otherwise, there is a risk of causing damage to the products.
7. As for applications where threads or tubes swing / rotate, use Rotary Joints, High Rotary Joints or Multi-Circuit Rotary Block only. The other PISCO products can be damaged in these applications.
8. Use only Die Temperature Control Fitting Series, Tube Fitting Stainless SUS316 Series, Tube Fitting Stainless SUS316 Compression Fitting Series or Tube Fitting Brass Series under the condition of over 60°C (140° F) water or thermal oil. Other PISCO products can be damaged by heat and hydrolysis under the condition above.
9. As for the condition required to dissipate static electricity or provide an antistatic performance, use EG series fitting and antistatic products only, and do not use other PISCO products. There is a risk that static electricity can cause system defects or failures.
10. Use only Fittings with a characteristic of spatter-proof such as Anti-spatter or Brass series in a place where flame and weld spatter is produced. There is a risk of causing fire by sparks.
11. Turn off the power supply to PISCO products, and make sure there is no residual air pressure in the pipes and equipment before maintenance. Follow the instructions below in order to ensure safety.
 - ① Make sure the safety of all systems related to PISCO products before maintenance.
 - ② Restart of operation after maintenance shall be proceeded with care after ensuring safety of the system by preventive measures against unexpected movements of machines and devices where pneumatic equipment is used.
 - ③ Keep enough space for maintenance when designing a circuit.
12. Take safety measures such as providing a protection cover if there is a risk of causing damages or fires on machine / facilities by a fluid leakage.

⚠ Caution


1. Remove dusts or drain before piping. They may get into the peripheral machine / facilities and cause malfunction.
2. When inserting an ultra-soft tube into push-in fitting, make sure to place an Insert Ring into the tube edge. There is a risk of causing the escape of tube and a fluid leakage without using an Insert Ring.
3. The product incorporating NBR as seal rubber material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with PISCO for more information.
4. Special option "Oil-free" products may cause a very small amount of a fluid leakage. When a fluid medium is liquid or the products are required to be used in harsh environments, contact us for further information.
5. In case of using non-PISCO brand tubes, make sure the tolerance of the outer tube diameter is within the limits of Table 1.

● Table 1. Tube O.D. Tolerance

mm size	Nylon tube	Polyurethane tube	inch size	Nylon tube	Polyurethane tube
ø1.8mm	—	± 0.05mm	ø1/8	± 0.1mm	± 0.15mm
ø3mm	—	± 0.15mm	ø5/32	± 0.1mm	± 0.15mm
ø4mm	± 0.1mm	± 0.15mm	ø3/16	± 0.1mm	± 0.15mm
ø6mm	± 0.1mm	± 0.15mm	ø1/4	± 0.1mm	± 0.15mm
ø8mm	± 0.1mm	± 0.15mm	ø5/16	± 0.1mm	± 0.15mm
ø10mm	± 0.1mm	± 0.15mm	ø3/8	± 0.1mm	± 0.15mm
ø12mm	± 0.1mm	± 0.15mm	ø1/2	± 0.1mm	± 0.15mm
ø16mm	± 0.1mm	± 0.15mm	ø5/8	± 0.1mm	± 0.15mm

6. Instructions for Tube Insertion

- ① Make sure that the cut end surface of the tube is at right angle without a scratch on the surface and deformations.
- ② When inserting a tube, the tube needs to be inserted fully into the push-in fitting until the tubing edge touches the tube end of the fitting as shown in the figure below. Otherwise, there is a risk of leakage.

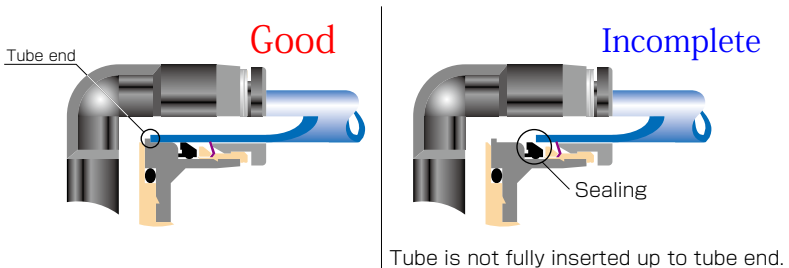

- ③ After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.
- ※ When inserting tubes, Lock-claws may be hardly visible in the hole, observed from the front face of the release-ring. But it does not mean the tube will surely escape. Major causes of the tube escape are the followings;
- ① Shear drop of the lock-claws edge
 - ② The problem of tube diameter (usually small)
- Therefore, follow the above instructions from ① to ③, even lock-claws is hardly visible.

7. Instructions for Tube Disconnection

- ① Make sure there is no air pressure inside of the tube, before disconnecting it.
- ② Push the release-ring of the push-in fitting evenly and deeply enough to pull out the tube toward oneself. By insufficient pushing of the release-ring, the tube may not be pulled out or damaged by scratch, and tube shavings may remain inside of the fitting, which may cause the leakage later.

8. Instructions for Installing a fitting

- ① When installing a fitting, use proper tools to tighten a hexagonal-column or an inner hexagonal socket. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
- ② Refer to Table 2 which shows the recommended tightening torque. Do not exceed these limits to tighten a thread. Excessive tightening may break the thread part or deform the gasket and cause a fluid leakage. Tightening thread with tightening torque lower than these limits may cause a loosened thread or a fluid leakage.
- ③ Adjust the tube direction while tightening thread within these limits, since some PISCO products are not rotatable after the installation.

● Table 2: Recommended tightening torque / Sealock color / Gasket materials

Thread type	Thread size	Tightening torque	Sealock color	Gasket materials
Metric thread	M3 × 0.5	0.7N·m	—	SUS304 NBR
	M5 × 0.8	1.0 ~ 1.5N·m		
	M6 × 1	2 ~ 2.7N·m		
	M3 × 0.5	0.7N·m		POM
	M5 × 0.8	1 ~ 1.5N·m		
	M6 × 0.75	0.8 ~ 1N·m		
Taper pipe thread	M8 × 0.75	1 ~ 2N·m	White	—
	R1/8	4.5 ~ 6.5N·m		
	R1/4	7 ~ 9N·m		
	R3/8	12.5 ~ 14.5N·m		
Unified thread	R1/2	20 ~ 22N·m	—	SUS304, NBR
	No.10-32UNF	1.0 ~ 1.5N·m		
National pipe thread taper	1/16-27NPT	4.5 ~ 6.5N·m	White	—
	1/8-27NPT	4.5 ~ 6.5N·m		
	1/4-18NPT	7 ~ 9N·m		
	3/8-18NPT	12.5 ~ 14.5N·m		
	1/2-14NPT	20 ~ 22N·m		

※ These values may differ for some products. Refer to each specification as well.

9. Instructions for removing a fitting

- ① When removing a fitting, use proper tools to loosen a hexagonal-column or an inner hex bolt.
- ② Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.

10. Arrange piping avoiding any load on fittings and tubes such as twist, tensile, moment load, shaking and physical impact. These may cause damages to fittings, tube deformations, bursting and the escape of tubes.



Common Safety Instructions for Valves

Before selecting or using PISCO products, read the following instructions. Read the detailed instructions for individual series as well as the instructions below.

Warning

1. Some products have an air direction to control. Make sure to distinguish the direction by the catalog or marking on the products. Installing the product with the wrong direction may cause personal injury or property damage.
2. Do not operate manual valves by machine. It may cause damage to the products.
3. Use clean air to supply and remove drainage and dusts. Place an air filter on the upstream side of valves. Impurities in the compressed air can cause malfunction of valves.
4. Avoid any load on PISCO products such as a tensile strength, twisting, bending, dropping and excessive impacts. These may cause damage to the products.

⚠ Caution

1. Refer to “Common Safety Instructions for Fittings” for the safety instructions for fitting part.
2. Instructions for Installing Valves
 - ① Use proper tools to tighten a hexagonal-column of Hand Valve and Ball Valve with taper pipe thread.
 - ② Refer to the following table which shows the recommended tightening torque to tighten thread. Excessive tightening may break the thread part or cause a fluid leakage due to the deformation of thread. Tightening thread with the tightening torque lower than these limits may cause a loosened thread or a fluid leakage.

● Table: Recommended tightening torque

Thread type	Thread size	Torque force
Taper pipe thread	R1/8	7 ~ 9Nm
	R1/4	12 ~ 14Nm
	R3/8	22 ~ 24Nm
	R1/2	28 ~ 30Nm

3. Instructions for removing Valve

- ① When removing taper pipe thread of Hand Valve and Ball Valve, use proper tools to loosen a hexagonal-column.
- ② Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunction.