


Coiling Tube for General Pneumatic Piping **Coiling Tube Series**

- *Coiling Tube for General Pneumatic Piping.*
- *Suitable for Air Gun or Air Driver.*
- *Less Stress on Fittings by Coiling Tube.*
- *Polyurethane for Flexibility. Nylon for Restoring Force.*

Model Designation (Example)

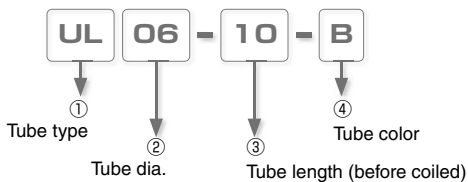

① Tube type

UL: Polyurethane Coiling Tube
NL: Nylon Coiling Tube

② Tube dia. (O.D.)

Code	03	04	06	08	10	12
O.D. (mm)	ø3	ø4	ø6	ø8	ø10	ø12

※ Tube O.D. ø 3mm is only available for UL (Polyurethane Coiling Tube).

③ Tube length

Code	1	2	3	5	7	10	14	20
Length(m)	1	2	3	5	7	10	14	20
Polyurethane Coiling Tube	ø3	●	●	●	●			
	ø4		●	●	●	●	●	●
	ø6		●	●	●	●	●	●
	ø8			●	●	●	●	●
	ø10				●	●	●	●
Nylon Coiling Tube	ø4		●	●	●	●	●	●
	ø6		●	●	●	●	●	●
	ø8			●	●	●	●	●
	ø10				●	●	●	●
	ø12				●	●	●	●

④ Tube color

Code	B	R	O	YB	Y	G	Bu	CB	C	W
Color	Black	Red	Orange	Ocher	Yellow	Green	Blue	Clear blue	Transparent	Milky white
UL	○	△	△	△	△	△	△	△	△	△
NL	○	△	△	△	△	△	△	△	-	△

※ Color selection with marking △ is available as a make-to-order product.


Specifications

Tube type	UL	NL
Fluid medium	Air	
Max. operating pressure (at 20°C 65%RH)	0.8MPa (※ 1、※ 2)	1.5MPa (※ 1)
Max. vacuum	-100kPa	
Operating temp. range	-15~60°C (No freezing)	-15~90°C (No freezing)

△ Warning

- ※ 1. The value of max. operating pressure is measured at 20°C and 65%RH. When Tubes are used in different conditions, consider a safety ratio of the pressure with an enough margin, referring to Burst Pressure Curve.
- ※ 2. When Tubes are frequently swung and bent, there is a possibility of generating heat between molecules and damaging the products.

Burst Pressure Curve (Reference value)

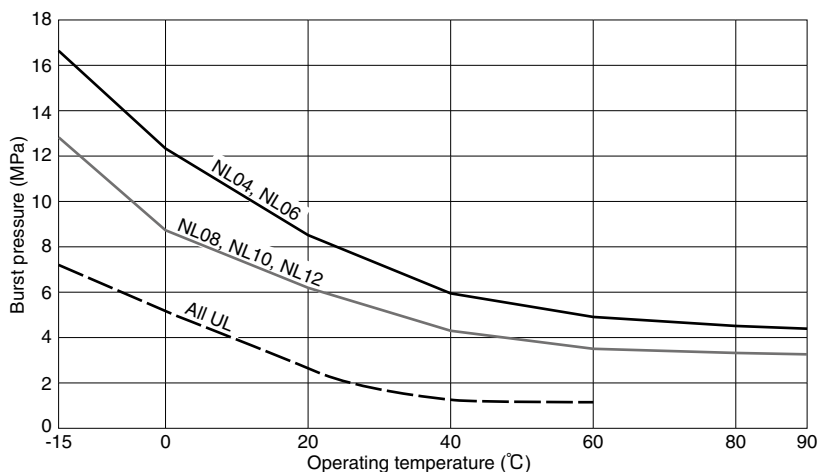

△ Detailed Safety Instructions

Before using PISCO products, be sure to read "Safety Instructions" and "Safety Instruction Manual" on page 23 to 27 and "Common Safety Instructions for Tubes" on page 593 to 594.

Caution

1. Due to the nature of the products, some tube additives contained in Tube material may bleed on the surface of Nylon Coiling Tube as time elapses.

Tube Series


Coiling Tube Series

UL Polyurethane Coiling Tube

NL Nylon Coiling Tube

RoHS compliant

RoHS compliant

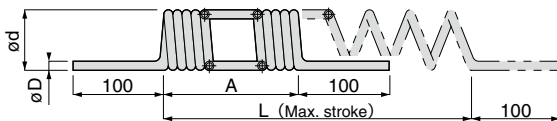

Unit : mm

Unit : mm

Model code	Tube O.D. x I.D. øD	L	A	ød
UL 03-1-□	3 × 2	210	70	16
UL 03-2-□		450	150	
UL 03-3-□		700	230	
UL 03-5-□		1200	390	
UL 04-2-□	4 × 2.5	360	120	24
UL 04-3-□		540	180	
UL 04-5-□		1100	350	
UL 04-7-□		1500	480	
UL 04-10-□		2100	700	
UL 04-14-□		3200	1040	
UL 04-20-□	4400	1450	30	
UL 06-2-□	6 × 4	500		160
UL 06-3-□		700		230
UL 06-5-□		1300		430
UL 06-7-□		1900		620
UL 06-10-□		2800		910
UL 06-14-□		3900	1300	
UL 06-20-□	5600	1850	42	
UL 08-3-□	8 × 5	750		250
UL 08-5-□		1200		390
UL 08-7-□		1700		540
UL 08-10-□		2400		770
UL 08-14-□		3200		1045
UL 08-20-□		4700	1550	
UL 10-5-□	10 × 6.5	1000	330	58
UL 10-7-□		1400	470	
UL 10-10-□		2100	680	
UL 10-14-□		3000	970	
UL 10-20-□		4200	1380	
UL 12-5-□		12 × 8	1000	
UL 12-7-□	1400		450	
UL 12-10-□	2000		660	
UL 12-14-□	2800		920	
UL 12-20-□	4000		1320	

※ □ in model code : Replaced with Tube color code

Model code	Tube O.D. x I.D. øD	L	A	ød
NL 04-2-□	4 × 2.5	300	100	27
NL 04-3-□		500	165	
NL 04-5-□		900	280	
NL 04-7-□		1200	395	
NL 04-10-□		1800	580	
NL 04-14-□		2500	820	
NL 04-20-□	3600	1200	35	
NL 06-2-□	6 × 4	420		140
NL 06-3-□		650		210
NL 06-5-□		1100		340
NL 06-7-□		1500		480
NL 06-10-□		2100		680
NL 06-14-□		2900	960	
NL 06-20-□	4200	1400	62	
NL 08-3-□	8 × 6	420		140
NL 08-5-□		700		230
NL 08-7-□		1000		330
NL 08-10-□		1500		500
NL 08-14-□		2100		700
NL 08-20-□		3000	1000	
NL 10-5-□	10 × 7.5	660	220	85
NL 10-7-□		1000	325	
NL 10-10-□		1400	460	
NL 10-14-□		2000	650	
NL 10-20-□		2800	930	
NL 12-5-□		12 × 9	600	
NL 12-7-□	900		280	
NL 12-10-□	1300		410	
NL 12-14-□	1800		590	
NL 12-20-□	2500		820	

※ □ in model code : Replaced with Tube color code

623

Standard Tube

Multi-core Tube

Coiling Tube

FITTING
CONTROLLER
VALVE
TUBE



SAFETY Instructions

This safety instructions aim to prevent personal injury and damage to properties by requiring proper use of PISCO products.

Be certain to follow ISO 4414 and JIS B 8370

ISO 4414 : Pneumatic fluid power...Recommendations for the application of equipment to transmission and control systems.

JIS B 8370 : General rules and safety requirements for systems and their components.

This safety instructions is classified into "Danger", "Warning" and "Caution" depending on the degree of danger or damages caused by improper use of PISCO products.



Danger

Hazardous conditions. It can cause death or serious personal injury.



Warning

Hazardous conditions depending on usages. Improper use of PISCO products can cause death or serious personal injury.



Caution

Hazardous conditions depending on usages. Improper use of PISCO products can cause personal injury or damages to properties.



Warning

1. Selection of pneumatic products

- ① A user who is a pneumatic system designer or has sufficient experience and technical expertise should select PISCO products.
- ② Due to wide variety of operating conditions and applications for PISCO products, carry out the analysis and evaluation on PISCO products. The pneumatic system designer is solely responsible for assuring that the user's requirements are met and that the application presents no health or safety hazards. All designers are required to fully understand the specifications of PISCO products and constitute all systems based on the latest catalog or information, considering any malfunctions.

2. Handle the pneumatic equipment with enough knowledge and experience

- ① Improper use of compressed air is dangerous. Assembly, operation and maintenance of machines using pneumatic equipment should be conducted by a person with enough knowledge and experience.

3. Do not operate machine / equipment or remove pneumatic equipment until safety is confirmed.

- ① Make sure that preventive measures against falling work-pieces or sudden movements of machine are completed before inspection or maintenance of these machine.
- ② Make sure the above preventive measures are completed. A compressed air supply and the power supply to the machine must be off, and also the compressed air in the systems must be exhausted.
- ③ Restart the machines with care after ensuring to take all preventive measures against sudden movements.

Disclaimer

1. PISCO does not take any responsibility for any incidental or indirect loss, such as production line stop, interruption of business, loss of benefits, personal injury, etc., caused by any failure on use or application of PISCO products.
2. PISCO does not take any responsibility for any loss caused by natural disasters, fires not related to PISCO products, acts by third parties, and intentional or accidental damages of PISCO products due to incorrect usage.
3. PISCO does not take any responsibility for any loss caused by improper usage of PISCO products such as exceeding the specification limit or not following the usage the published instructions and catalog allow.
4. PISCO does not take any responsibility for any loss caused by remodeling of PISCO products, or by combinational use with non-PISCO products and other software systems.
5. The damages caused by the defect of Pisco products shall be covered but limited to the full amount of the PISCO products paid by the customer.



SAFETY INSTRUCTION MANUAL

PISCO products are designed and manufactured for use in general industrial machines. Be sure to read and follow the instructions below.

Danger

1. Do not use PISCO products for the following applications.
 - ① Equipment used for maintaining / handling human life and body.
 - ② Equipment used for moving / transporting human.
 - ③ Equipment specifically used for safety purposes.

Warning

1. Do not use PISCO products under the following conditions.
 - ① Beyond the specifications or conditions stated in the catalog, or the instructions.
 - ② Under the direct sunlight or outdoors.
 - ③ Excessive vibrations and impacts.
 - ④ Exposure / adhere to corrosive gas, inflammable gas, chemicals, seawater, water and vapor. *
 - * Some products can be used under the condition above(④), refer to the details of specification and condition of each product.
2. Do not disassemble or modify PISCO products, which affect the performance, function, and basic structure of the product.
3. Turn off the power supply, stop the air supply to PISCO products, and make sure there is no residual air pressure in the pipes before maintenance and inspection.
4. Do not touch the release-ring of push-in fitting when there is a working pressure. The lock may be released by the physical contact, and tube may fly out or slip out.
5. Frequent switchover of compressed air may generate heat, and there is a risk of causing burn injury.
6. Avoid any load on PISCO products, such as a tensile strength, twisting and bending. Otherwise, there is a risk of causing damage to the products.
7. As for applications where threads or tubes swing / rotate, use Rotary Joints, High Rotary Joints or Multi-Circuit Rotary Block only. The other PISCO products can be damaged in these applications.
8. Use only Die Temperature Control Fitting Series, Tube Fitting Stainless SUS316 Series, Tube Fitting Stainless SUS316 Compression Fitting Series or Tube Fitting Brass Series under the condition of over 60°C (140° F) water or thermal oil. Other PISCO products can be damaged by heat and hydrolysis under the condition above.
9. As for the condition required to dissipate static electricity or provide an antistatic performance, use EG series fitting and antistatic products only, and do not use other PISCO products. There is a risk that static electricity can cause system defects or failures.
10. Use only Fittings with a characteristic of spatter-proof such as Anti-spatter or Brass series in a place where flame and weld spatter is produced. There is a risk of causing fire by sparks.
11. Turn off the power supply to PISCO products, and make sure there is no residual air pressure in the pipes and equipment before maintenance. Follow the instructions below in order to ensure safety.
 - ① Make sure the safety of all systems related to PISCO products before maintenance.
 - ② Restart of operation after maintenance shall be proceeded with care after ensuring safety of the system by preventive measures against unexpected movements of machines and devices where pneumatic equipment is used.
 - ③ Keep enough space for maintenance when designing a circuit.
12. Take safety measures such as providing a protection cover if there is a risk of causing damages or fires on machine / facilities by a fluid leakage.

⚠ Caution


1. Remove dusts or drain before piping. They may get into the peripheral machine / facilities and cause malfunction.
2. When inserting an ultra-soft tube into push-in fitting, make sure to place an Insert Ring into the tube edge. There is a risk of causing the escape of tube and a fluid leakage without using an Insert Ring.
3. The product incorporating NBR as seal rubber material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with PISCO for more information.
4. Special option "Oil-free" products may cause a very small amount of a fluid leakage. When a fluid medium is liquid or the products are required to be used in harsh environments, contact us for further information.
5. In case of using non-PISCO brand tubes, make sure the tolerance of the outer tube diameter is within the limits of Table 1.

● Table 1. Tube O.D. Tolerance

mm size	Nylon tube	Polyurethane tube	inch size	Nylon tube	Polyurethane tube
ø1.8mm	—	± 0.05mm	ø1/8	± 0.1mm	± 0.15mm
ø3mm	—	± 0.15mm	ø5/32	± 0.1mm	± 0.15mm
ø4mm	± 0.1mm	± 0.15mm	ø3/16	± 0.1mm	± 0.15mm
ø6mm	± 0.1mm	± 0.15mm	ø1/4	± 0.1mm	± 0.15mm
ø8mm	± 0.1mm	± 0.15mm	ø5/16	± 0.1mm	± 0.15mm
ø10mm	± 0.1mm	± 0.15mm	ø3/8	± 0.1mm	± 0.15mm
ø12mm	± 0.1mm	± 0.15mm	ø1/2	± 0.1mm	± 0.15mm
ø16mm	± 0.1mm	± 0.15mm	ø5/8	± 0.1mm	± 0.15mm

6. Instructions for Tube Insertion

- ① Make sure that the cut end surface of the tube is at right angle without a scratch on the surface and deformations.
- ② When inserting a tube, the tube needs to be inserted fully into the push-in fitting until the tubing edge touches the tube end of the fitting as shown in the figure below. Otherwise, there is a risk of leakage.

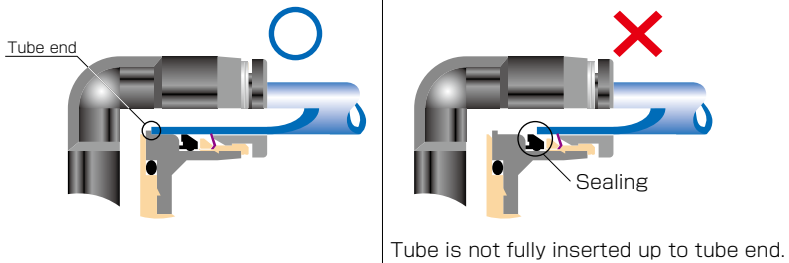

- ③ After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.
- ※ When inserting tubes, Lock-claws may be hardly visible in the hole, observed from the front face of the release-ring. But it does not mean the tube will surely escape. Major causes of the tube escape are the followings;
- ① Shear drop of the lock-claws edge
 - ② The problem of tube diameter (usually small)
- Therefore, follow the above instructions from ① to ③, even lock-claws is hardly visible.

7. Instructions for Tube Disconnection

- ① Make sure there is no air pressure inside of the tube, before disconnecting it.
- ② Push the release-ring of the push-in fitting evenly and deeply enough to pull out the tube toward oneself. By insufficient pushing of the release-ring, the tube may not be pulled out or damaged by scratch, and tube shavings may remain inside of the fitting, which may cause the leakage later.

8. Instructions for Installing a fitting

- ① When installing a fitting, use proper tools to tighten a hexagonal-column or an inner hexagonal socket. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
- ② Refer to Table 2 which shows the recommended tightening torque. Do not exceed these limits to tighten a thread. Excessive tightening may break the thread part or deform the gasket and cause a fluid leakage. Tightening thread with tightening torque lower than these limits may cause a loosened thread or a fluid leakage.
- ③ Adjust the tube direction while tightening thread within these limits, since some PISCO products are not rotatable after the installation.

● Table 2: Recommended tightening torque / Sealock color / Gasket materials

Thread type	Thread size	Tightening torque	Sealock color	Gasket materials
Metric thread	M3 × 0.5	0.7N·m	—	SUS304 NBR
	M5 × 0.8	1.0 ~ 1.5N·m		
	M6 × 1	2 ~ 2.7N·m		
	M3 × 0.5	0.7 N·m		POM
	M5 × 0.8	1 ~ 1.5N·m		
	M6 × 0.75	0.8 ~ 1N·m		
Taper pipe thread	M8 × 0.75	1 ~ 2N·m	White	—
	R1/8	1.5 ~ 1.5 N·m		
	R1/4	1 ~ 1 N·m		
	R3/8	1.5 ~ 1.5 N·m		
Unified thread	R1/2	2 ~ 2 N·m	—	SUS304, NBR
	No.10-32UNF	1.0 ~ 1.5N·m		
National pipe thread taper	1/16-27NPT	1.5 ~ 1.5 N·m	White	—
	1/8-27NPT	1.5 ~ 1.5 N·m		
	1/4-18NPT	1 ~ 1 N·m		
	3/8-18NPT	1.5 ~ 1.5 N·m		
	1/2-14NPT	2 ~ 2 N·m		

※ These values may differ for some products. Refer to each specification as well.

9. Instructions for removing a fitting

- ① When removing a fitting, use proper tools to loosen a hexagonal-column or an inner hex bolt.
- ② Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.

10. Arrange piping avoiding any load on fittings and tubes such as twist, tensile, moment load, shaking and physical impact. These may cause damages to fittings, tube deformations, bursting and the escape of tubes.



Common Safety Instructions for Tubes

Before selecting or using PISCO products, read the following instructions. Read the detailed instructions for individual series as well as the instructions below.

Warning

1. Avoid any load on Tubes such as tensile strength, twisting and bending. These may cause the crush, burst and escape of Tubes.
2. Protect Tubes from scratches caused by snagging or kinking. It may cause the burst of Tubes.
3. The burst pressure of Tubes drops as temperature rises. Read the operating pressure in the catalog well, and apply safety factor.
4. The minimum bending radius and the minimum installation radius are reference values at 20°C and 65% RH. They are not guaranteed values. Refer to the minimum bending radius when Tubes are wound around a mandrel (round bar). As for the other operating conditions, refer to the minimum installation radius. These values vary depending on operating environments or the tube length. In order to make sure the suitability of Tubes, carry out the operation test by the user's actual machine before using Tubes.
5. Place Insert Ring into the edge of soft tubes like UD Series or tubes inserted to Push-In Fittings with a water fluid. There is a possibility of escape of Tube without Insert Ring.
6. Only Anti-spatter Tube can be used under the flame and weld spatter condition. Otherwise, there is a possibility of danger to catch fire by sparks.
7. Only Soft Nylon Tube can be used for warm water or thermal oil. Otherwise, tubes may burst due to deterioration.
8. Only Anti-static Tube can be used under the condition required to dissipate static electricity or provide an anti-static performance. There is a possibility that static electricity can cause malfunction or other troubles with the system.
9. An abnormal rise in temperature due to adiabatic compression may cause damage to Tubes.
10. If Tubes are used with any fluid or under any condition / environment other than listed in the catalog, as well as used outdoors, the conformity evaluation with the actual machine and safety measures taken by the responsible person are highly recommended.


⚠ Caution

1. When bending tubes, observe the minimum bending radius and minimum installation radius.
2. When piping, provide sufficient lengths of tube, considering possible shrinkage.
3. When Tubes are inserted into Push-In Fitting, make sure that cut end surface of Tubes are right angle, without any scratches on the surface and deformations.
4. Note that the effective cross-section area varies by tube length. Refer to "Effective Area of Piping" in "Tube Performance" .

■ Minimum Bending Radius & Minimum Mounting Radius

1. Measurement method

● Minimum Bend Radius (JIS method)

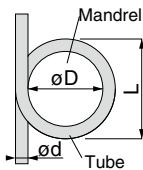

JIS method (based on JIS B8381)
Minimum Bending Radius is measured by winding a tube tightly around a mandrel. Minimum Bending Radius is the value when the deformation ratio of the tube O.D. reaches 25%.
Measurement condition: 20°C
65%RH

$$n = \left(1 - \frac{L - D}{2d}\right) \times 100$$

n= Deformation ratio (%)


Standard: under 25%

d= Tube O.D.

L= Measured value (mm)

D= Mandrel diameter (mm)

● Minimum Installation Radius (Vice method)

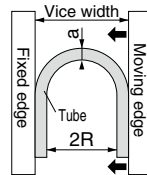

Fix the tube as the left figure shows. Slowly move the moving edge toward the fixed edge. When "a" deforms 25% from the initial value, the measured R is Minimum Installation Radius.
Measurement condition: 20°C
65%RH

Tube Performance

Effective Sectional Area of Piping

